

Download How To Use Whirlpool Dishwasher Manual

Dishwasher Use Prepare and Load the Dishwasher IMPORTANT: Remove leftover food, bones, toothpicks and other hard items from the dishes. Remove labels from containers before washing. Make sure that when the dishwasher door is closed no items are blocking the detergent dispenser. Items should be loaded with soiled surfaces facing down andDishwasher Use STEP 1 Prepare and Load the Dishwasher IMPORTANT: Remove leftover food, bones, toothpicks, and other hard items from the dishes. Remove labels from containers before washing. Upper Rack Lower Rack Make sure nothing keeps spray arm(s) from spinning freely. It is important for the water spray to reach all soiled surfaces. Page 4: Cycle Table. To add rinse aid, turn the Select a Cycle (cycles vary by model) RINSE AID dispenser cap ¼ turn to the left IMPROVES DRYING Full and lift off. Pour rinse aid into the Lock Efficient dishwashers run longer to save water and energy, just as opening until indicator level is at driving a car slower saves on gas. Step 2. Load your dishwasher with all the dishes facing the spin arm where the water is sprayed from during the wash and rinse cycles. Typically, that means to stack your plates and bowls facing the center of the dishwasher. On the upper shelf, place the cups and glasses or small items face down so they do not collect water...